

K-N+K-C31 Display User Manuals

This system can be work when you received them, Please contact display to power and you can press start from next button, then display will show 001-->1. When turn off display, number will start count from 001 again.

Default voice is Please XXX go to XX counter. If you want change this voice counter to doctor or office you need go to F8-E2 to setting.

If not work, you need re-connect again, first setting F9 and setting F1-E1 .

This is simple manual teach you how to connect button to display,and adjust prompt voice you need.other more displays function you can read another manual.

Brief instruction

F1 Storage Mode (Set Transmitters number)

E1-Register Transmitters

E2-Register Counter Number

F2 Deletion Mode (Delete Transmitter Number)

E1-Delete Transmitters

E2-Delete Counter Number

F6 Voice Setting

E1-Voice Mode

E2- The times of Voice Announcements

F8 Key Settings

E2 Voice pairing

FP Choose the first number you like to start register

F9 Restore Factory Settings

 : Setting key, Confirm key, Move digit key

 : Exit system


 : Up key, Increase number key





 : Down key, Decrease number key

F1 Storage Mode



E1 Register Transmitters

1. Press "" key 2 seconds, screen show F1

2. Press "" key, screen show E1

3. Press "" to confirm, screen show 01, "1" is flashing, and press "" "" "" key to choose the number you want save.

4. Press any key from transmitter, you will hear a voice (success) and number skip to next one, then the number registered successfully.

5. Press "" it will exit to "E1", press "" again to exit setting state.



NOTE: If you hear a voice (failure), it means number has been used.





If just buy one button , you just register 01 and exit setting , press button number will start from 001 .

If you buy two buttons, you need register 01 and 02 and exit setting , press any button number will start from 001 . and press any button, number will goes next one.



E2 Register Counter Number

1. Press "" key 2 seconds, screen show F1

2. Press "" key, screen show E1, press  to E2

3. Press "" to confirm, screen show 1, "1" is flashing, and press "" "" "" key to choose the number you want to save. (You can choose the number from 0-9, A-E)

4. Press any key on the remote control, you will hear a voice (success) and number skip to next number, then the remoter control is registered successfully.

5. Press "" it will exit to "E2", press "" again to exit setting state.

F6 Voice Setting

E1 Voice Mode

1. Press “” key 2 seconds, screen show F1
2. Press “” key five times, screen show F6, press “” screen show E1
3. Press “” to confirm, screen show 0(or other numbers)
4. Press “” “” to choose the number from 0-7
 - “0” means English pronunciation (eg.No.105:please number one zero five go to counter)
 - “1” means English pronunciation (eg.No.105: please number one zero five)
 - “2” means English pronunciation (eg.No.105: Please number one hundred and five go to counter)
 - “3” means English pronunciation (eg.No.105: Please number one hundred and five)
 - “4” means Ding Dong voice alert
 - “5” means music alert 1
 - “6” means music alert 2
 - “7” means warning sound
5. Press “” it will exit to “E1”, then it is s successful.
6. Press “” again to exit setting state

For K-GSN1+K-C31, you can choose 0 or 2 or 3 or 4.

For example number 22 , counter 1

0 : pls number zero two two go to one counter

2 : pls number twenty two go to one counter

4 : show 022-->1 come with ding dong sound

E2 The times of Voice Announcements (Default:1 times)

1. Press “” key 2 seconds, screen show F1
2. Press “” key five times, screen show F6, press “” screen show E1, press “” to show E2
3. Press “” to confirm, screen show 1(or other numbers)
4. Press “” “” to choose the number from 1 to 9. (The number means the times of speaking)
5. Press “” it will exit to “E2”, then it is s successful.
6. Press “” again to exit setting state

F8 Key Settings

E2 Voice pairing

1. Press “” key 2 seconds, screen show F1
2. Press “” key seven times, screen show F8, press “” screen show E1
3. Press “” to show E2 and Press “” to confirm ,and you will see 00 (sound cancel)
4. Press “” “” to choose the number (voice) you need.

For example, you need sound is “window” , you need choose 45 , and press button . Then you will hear successful.

5. Press “” again to exit setting state

When you press number+ENT from keypad, you will hear voice like this “please XX number go to windows ”

12 kitchen 16 Doctor 17 Nurse 20 Reception 22 Office 39 Counter 45 windows

FP Choose the first number you like to start register

1. Press “” key 2 seconds, screen show F1
2. Press “” key to choose FP, press “” and screen show 000 (3-digit number, first number can be letter A, b, C, d, E)
3. You can choose the number you need by “” “” or “” key, such as A05
4. Press “” again to exit setting state, press the transmitter , the number will be shown from A05 as a beginning.

F9 Restore factory setting

1. Press “” key 2 seconds, screen show F1
2. Press “” key 8 times, screen show F9, press “” screen show E1
3. Keep press “” 2 seconds to confirm, you will hear a voice (success), then it is s successful. And display exit setting state automatically.